


Parts for One Front Opening Bluebird House

Bottom — $\frac{3}{4}$ " x $5\frac{1}{2}$ " x $5\frac{3}{4}$ "
Back — $\frac{3}{4}$ " x $5\frac{1}{2}$ " x 19 "
2-Sides — $\frac{3}{4}$ " x $7\frac{1}{4}$ " x 23 "
Front — $\frac{3}{4}$ " x $5\frac{1}{2}$ " x $10\frac{3}{4}$ "
Top — $\frac{3}{4}$ " x $9\frac{1}{4}$ " x 13 "

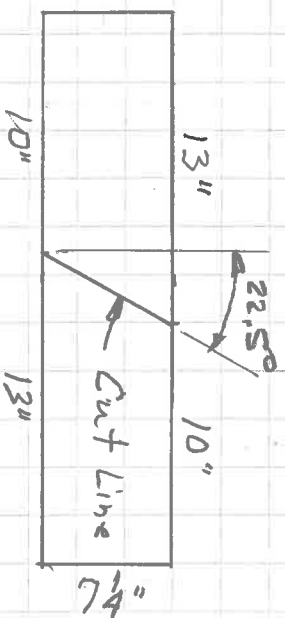


15- $1\frac{5}{8}$ " lg. Gold Deck Screws

1- 8d x $2\frac{1}{2}$ " lg Electrogalvanized Roofing Nail.

Holes for deck screws should be drilled with $\frac{7}{64}$ " ϕ drill bit to a depth of $1\frac{5}{8}$ ". Pre drilling holes for screws should minimize possible future cracking of the wood caused by many cycles of wetting and drying out of the wood.

Holes for the 8d nails should be drilled with a $\frac{9}{64}$ " ϕ bit so that the nail can be removed easily for monitoring the birdhouse.

The notches on inside of the front door will allow any Tree Swallows to climb out when investigating the box as a possible nesting place,

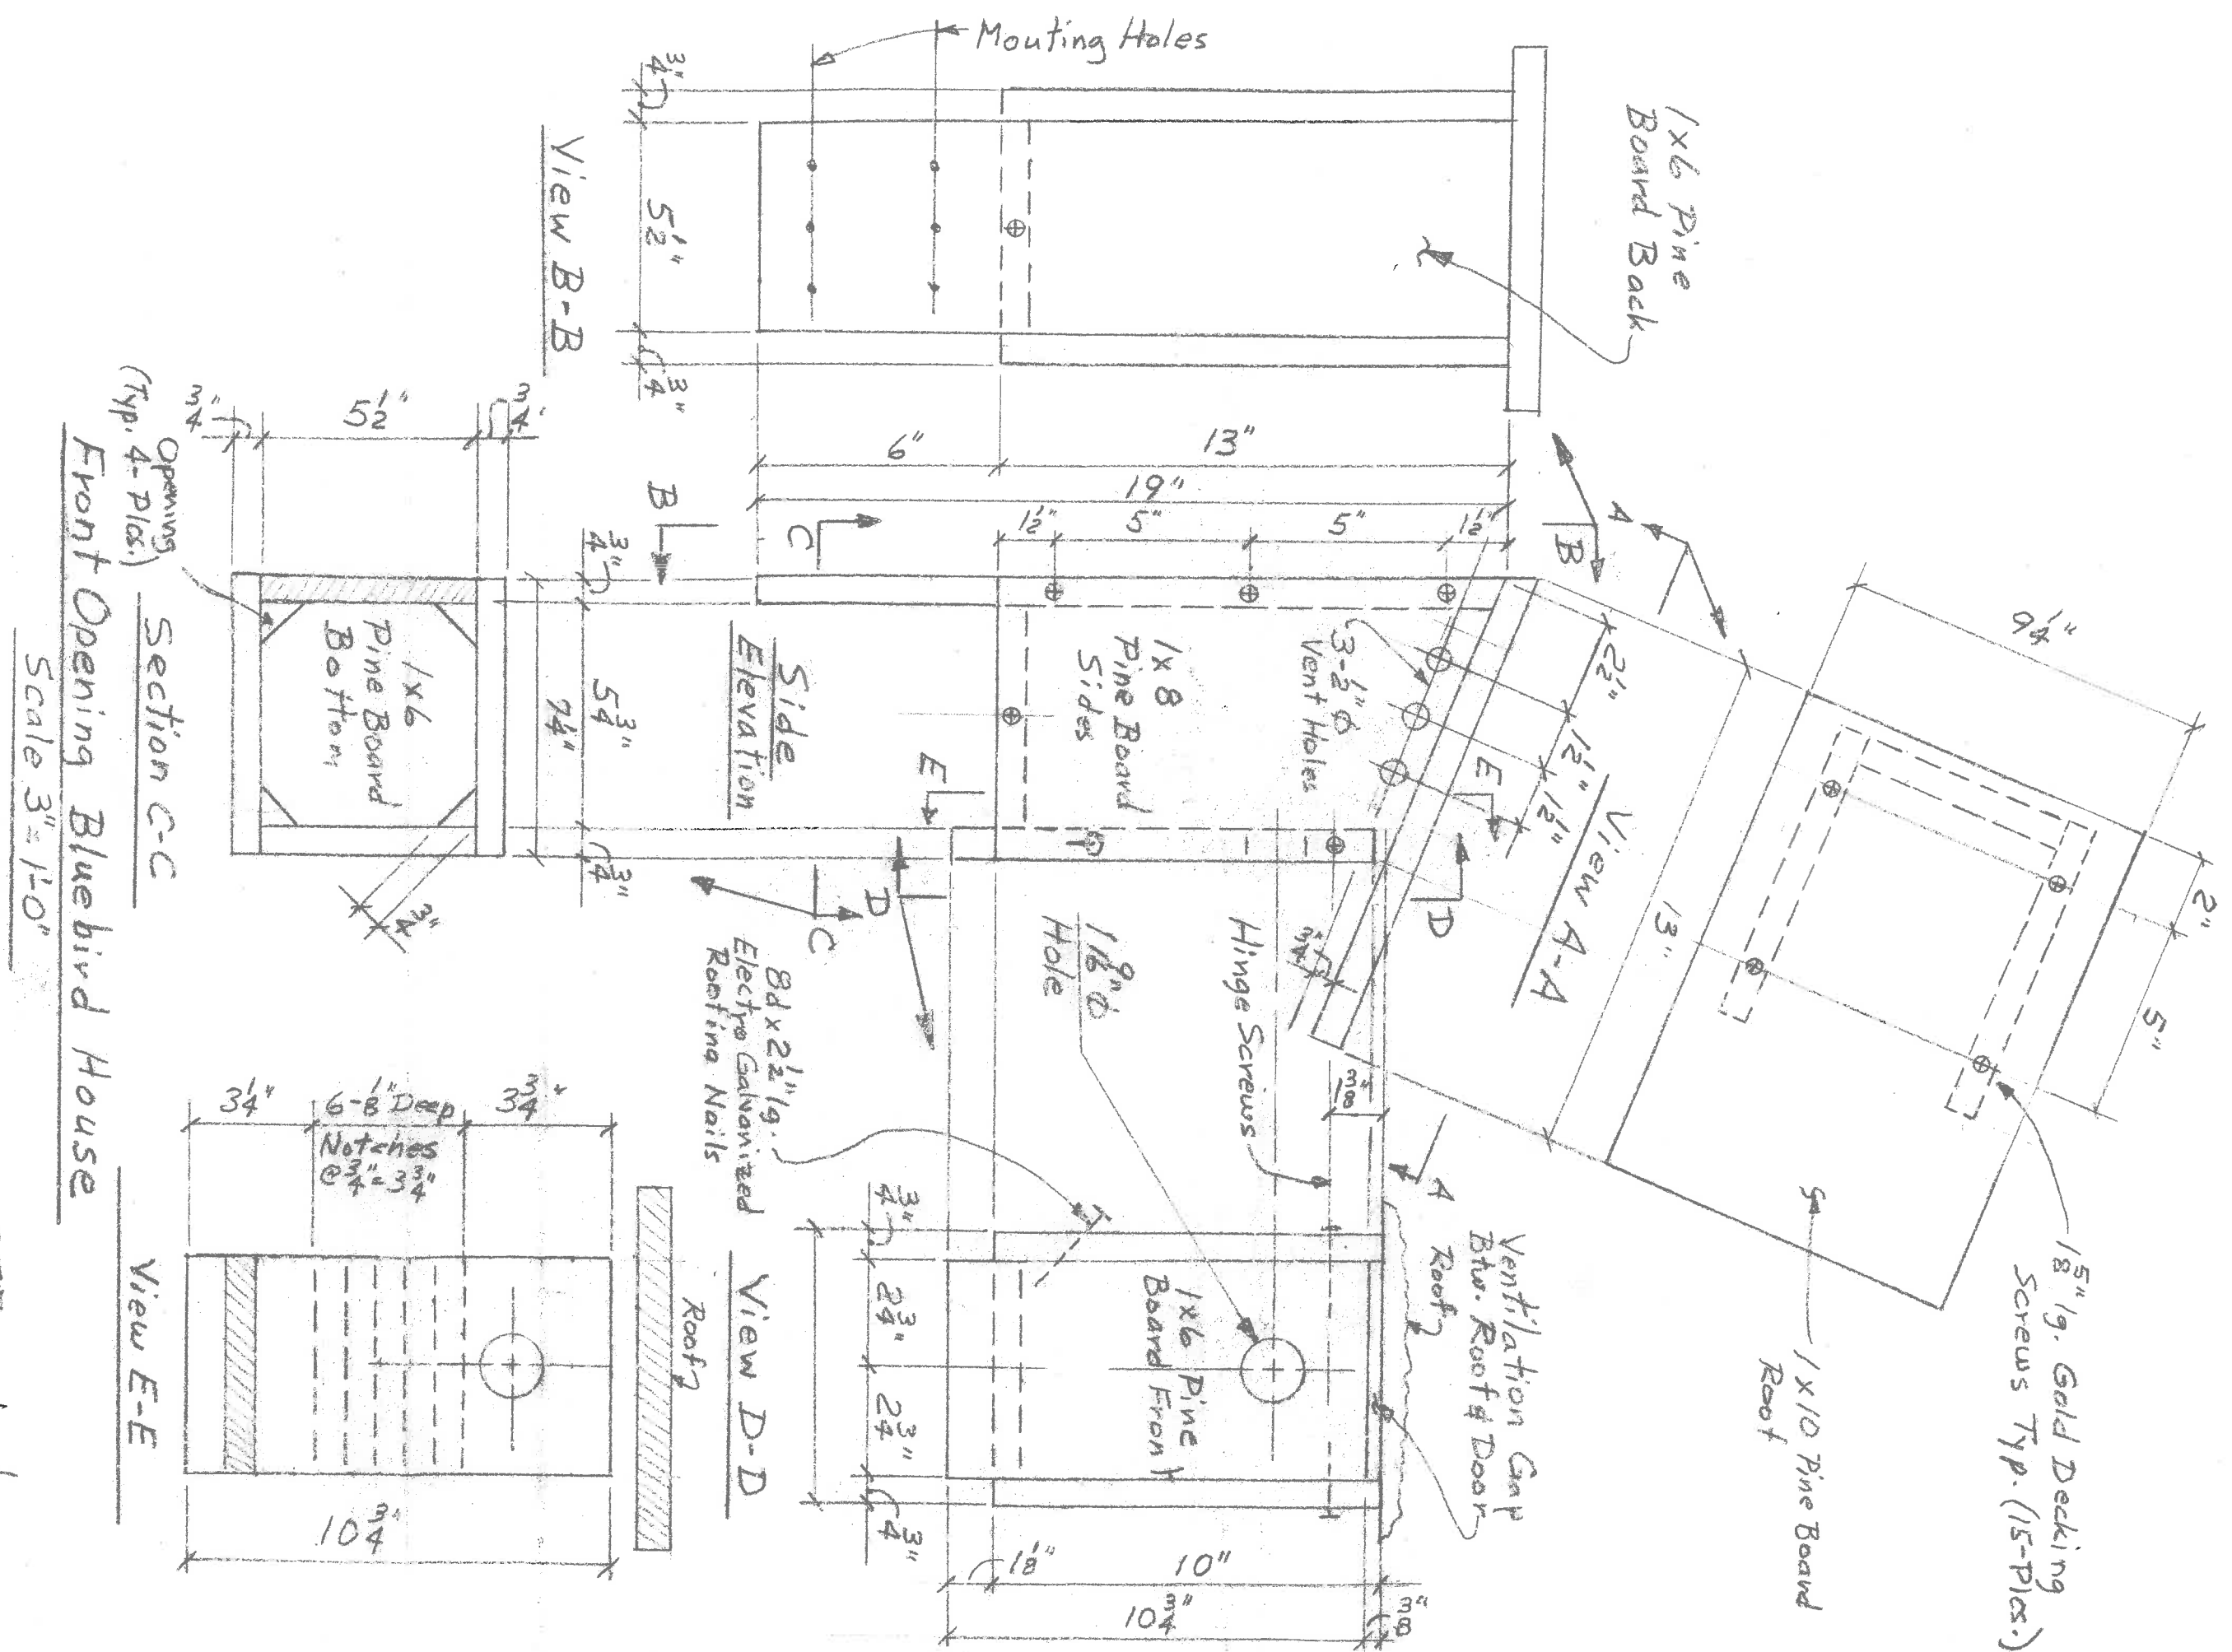

Front Opening Bluebird House

Scale 3" = 1'-0"

25% reduction
For 8 1/2" x 11" Paper